

# Integrating Sound Level Meter

## ST-109/ST-107/ST-107S User's Manual



CE

# SOUNDTEK

HB2ST1070004



# Contents:

|   |    |
|---|----|
| 1. SAFETY PRECAUTIONS .....                       | 3  |
| 1.1. Preliminary Description .....                | 3  |
| 1.2. Note.....                                    | 3  |
| 2. PREPARATION FOR USE .....                      | 4  |
| 2.1. Initial.....                                 | 4  |
| 2.2. Supply Voltage .....                         | 4  |
| 2.3. Calibration .....                            | 4  |
| 2.4. Storage.....                                 | 4  |
| 3. INSTRUMENT INSTRUCTIONS .....                  | 5  |
| 3.1. Instrument Description .....                 | 5  |
| 3.1.1. Controls Description.....                  | 5  |
| 3.1.2. Display Description .....                  | 6  |
| 3.1.3. ST-109 Microphone .....                    | 7  |
| 3.1.4. ST-107S Microphone.....                    | 8  |
| 3.2. Measurement Procedures.....                  | 8  |
| 3.3. Data Hold .....                              | 9  |
| 3.4. Maximum/Minimum .....                        | 9  |
| 3.5. Single Data Record .....                     | 9  |
| 3.6. Viewing Logged Reading .....                 | 9  |
| 3.7. Set Mode.....                                | 10 |
| 3.7.1. Clock set .....                            | 10 |
| 3.7.2. Auto Record Time Set.....                  | 10 |
| 3.7.3. Auto Power Off Time Set .....              | 10 |
| 3.7.4. Clear Data Logger Memory.....              | 11 |
| 3.7.5. Clear All Data Logger Memory .....         | 11 |
| 3.7.6. Copy All Data Logger To micro SD Card..... | 11 |
| 3.7.7. Auto Backup.....                           | 12 |
| 3.7.8. 94dB Calibration .....                     | 12 |
| 4. SPL (LXYP) TEST MODE.....                      | 13 |
| 5. LEQ TEST MODE .....                            | 14 |
| 5.1. integral Time set.....                       | 15 |
| 6. SEL (LAE) TEST MODE .....                      | 16 |
| 7. PEAK MAXIMUM TEST MODE .....                   | 17 |
| 8. RT60( REVERBERATION TIME) TEST MODE .....      | 18 |
| 8.1. Rt 60 estimate mode .....                    | 19 |
| 9. EXPLANATION.....                               | 20 |
| 9.1. 1. Measurement Parameters:.....              | 20 |
| 9.2. A, C, Z Weighting Instruction: .....         | 21 |

|  |    |
|--|----|
| 9.2.1. Input interface .....                 | 22 |
| 9.2.2. ANALOG AC/DC OUTPUT .....             | 22 |
| 9.3. The Microphone Lengthens The Test ..... | 23 |
| 10. MAINTENANCE .....                        | 24 |
| 10.1. General Information.....               | 24 |
| 10.2. Battery Replacement.....               | 24 |
| 10.3. Cleaning .....                         | 24 |
| 10.4. End of Life .....                      | 24 |
| 11. TECHNICAL SPECIFICATIONS.....            | 25 |
| 11.1. Feature .....                          | 25 |
| 11.1.1.Standard: .....                       | 27 |
| 11.1.2.General Data.....                     | 27 |
| 11.2. Environment .....                      | 27 |
| 11.2.1.Environmental Conditions .....        | 27 |
| 11.2.2.EMC .....                             | 28 |
| 11.3. Accessories .....                      | 28 |
| 11.3.1.Standard Accessories .....            | 28 |
| 12. SERVICE .....                            | 29 |
| 12.1. Warranty Conditions.....               | 29 |
| 12.2. Service .....                          | 29 |

# 1. SAFETY PRECAUTIONS

When taking measurements:

- Avoid doing measurements in humid or wet places - make sure that humidity is within the limits indicated in section “environmental conditions”.
- Avoid doing measurements in presence of explosive gas, combustible gas, steam or excessive dust.

The following symbols are used:



**Caution:** refer to the user’s manual. An incorrect use may damage the tester or its components



The instrument conforms to the CE standard

## 1.1. Preliminary Description

ST-109 is a high performance conforms to international IEC61672-1:2002Class 1  
ST-107(S) is a high performance conforms to international IEC61672-1:2002Class 2  
Integrating Sound Level Meter. It may also survey: SPL(Lxyp),  
Lxmax,Lxmin,,Lxeq, SEL (LAE) , Lcpeak, RT60, , three kind of at the same time  
frequency weighting (A, C, Z) and three kind of at the same time weighting (F, S,  
I) may simultaneously survey many kinds of appraisal target, the dynamic range  
is bigger than 100dB, it does not need to select the measuring range when doing  
measurements, the operation is simple.

**Applications:** Evaluation of environmental noise, Measurements of noise at workplaces, Assessment of product noise.

## 1.2. Note



### CAUTION

Does not observe the warning and/or operation instruction, it's possible to damage the instrument either its components or the operator

- Do not operate the instrument at temperature and humidity environment beyond to reference conditions of chapter 11.2.1.
- Keep the microphone dry and avoid severe vibration.
- Wind blowing across the microphone would bring additional extraneous noise. Once using the instrument in the presence of wind, it must mount the windscreen to prevent the undesirable signals. (Refer to Fig.1)

## 2. PREPARATION FOR USE

### 2.1. Initial

The instrument has been checked mechanically and electrically prior to shipment. Take care to ensure the instrument reaches you undamaged.

However, it is wise to carry out a rapid check in order to detect any possible damage that may cause during transport. If its damage, claims to the dealer immediately.

Check the packaging content according to packing list reported in 11.3.1chapter .In case of discrepancies, contact the dealer immediately.

In the event of re-shipment of the instrument please follow the instructions reported in chapter.

### 2.2. Supply Voltage

The instrument is powered by batteries. When batteries are low, a low battery indication is displayed.

To replace/insert batteries as the instructions indicated in chapter.

The instrument can also be powered by the external power supply. The external power supply's voltage is 6~9V and its maximum output current is 500mA.



#### CAUTION

If you don't use the instrument for a long period, please take the batteries out to prevent eventual acid leakage from damaging the instrument

### 2.3. Calibration

The instrument complies with the technical specifications contained in this manual and such compliance is guaranteed for 1 year. The instrument is maybe need recalibration after one year.

### 2.4. Storage

After a period of storage in extreme environmental conditions exceeding the limits mentioned in paragraph 11.2.1 let the instrument return to normal measuring conditions before using it.

### 3. INSTRUMENT INSTRUCTIONS

#### 3.1. Instrument Description

##### 3.1.1. Controls Description

1. Microphone

2. : Power Button

3. : Backlight Button

4. : Frequency Weighting Select Butto

5. : Start or Pause Test Button

6. : Time Weighting Select Button

7. : Test function select button

8. : Set Button

9. : Record dada / Reading Record dada button

10. : Data Hold/ Setup function up Button.

11. : Clock display select / Setup function right Button.

12. : Enter key

13. : Stop Test/ Setup function down key.

14. : Clock display select / Setup function left key.

15. Micro SD Card

16. AC/DC Output

17. USB interface

18. DC voltage Input (6V~9V)

### 3.1.2. Display Description



|                       |                             |
|-----------------------|-----------------------------|
|                       | Bargraph                    |
|                       | Auto Power Off              |
| <b>RT</b>             | Reverberation Time          |
| <b>HOLD</b>           | Data Hold                   |
| <b>Peak</b>           | Peak                        |
| <b>S<sub>EL</sub></b> | Sound exposure level        |
| <b>S<sub>PL</sub></b> | Sound pressure level        |
| <b>Leq</b>            | Equivalent continuous level |
| <b>1000</b>           | Sound level read out        |
| <b>MAX</b>            | Maximum                     |
| <b>MIN</b>            | Minimum                     |
| <b>dBZ</b>            | Z Weighting                 |
| <b>dBC</b>            | C Weighting                 |
| <b>dBA</b>            | A Weighting                 |
| <b>SEC</b>            | Reverberation Time unit     |
| <b>USB</b>            | USB deliver                 |
| <b>SD</b>             | SD Install                  |
|                       | Low Batty                   |
| <b>REC</b>            | Record                      |
| <b>FULL</b>           | Memory Full                 |
| <b>MEM</b>            | Memory Viewing              |
| <b>Impulse</b>        | Impulse Response            |
| <b>Fast</b>           | Fast Response               |
| <b>Slow</b>           | Slow Response               |
| <b>00:00:00</b>       | Clock Read out t            |
|                       | Start Measures              |
| <b>  </b>             | Pause Measures              |
|                       | Stop Measures               |
| <b>SET</b>            | Setup Mode                  |
| <b>TIME</b>           | Measure Time                |

### 3.1.3. ST-109 Microphone

- Diameter : 1/2 inch
- Polarization voltage : 0V
- Dynamic range : 25dBA ~140dB
- Sensitivity : -26±2dB

#### Free field frequency response :

| Frequency (KHz) | Deviation pressure |
|-----------------|--------------------|
| 0.25            | 0                  |
| 0.30            | 0                  |
| 0.40            | 0                  |
| 0.50            | 0.1                |
| 0.63            | 0.1                |
| 0.80            | 0.1                |
| 1.0             | 0.2                |
| 1.25            | 0.3                |
| 1.60            | 0.4                |
| 2.0             | 0.5                |
| 2.5             | 0.6                |
| 3.15            | 0.7                |
| 4.0             | 0.8                |
| 5.0             | 1.3                |
| 6.3             | 1.9                |
| 8.0             | 2.8                |
| 10              | 4.1                |
| 12.5            | 6.0                |
| 16.0            | 7.3                |
| 20.0            | 9.1                |

### 3.1.4. ST-107S Microphone

- Diameter : 1/2 inch
- Polarization voltage : 0V
- Dynamic range : 25dBA ~140dB
- Sensitivity : -32±3dB (250Hz 0dB=1V/Pa)
- Free field frequency response : ±2dB(25Hz~12.5kHz)

| Frequency (KHz) | Deviation of pressure |
|-----------------|-----------------------|
| 0.25            | 0.0                   |
| 1               | -0.1                  |
| 2               | -0.5                  |
| 3               | -0.6                  |
| 4               | -0.9                  |
| 5               | -1.2                  |
| 6               | -1.7                  |
| 7               | -2.2                  |
| 8               | -2.8                  |
| 9               | -3.3                  |
| 10              | -4.1                  |
| 12.5            | -6.0                  |

### 3.2. Measurement Procedures

- Press  button turn on sound level meter , press this button again turn off sound level meter
- Press  button to select test function.
  - ⊙ Lxyp→Leq→LAE→PeakMAX→RT60
- Press  button to select time weighting.
  - ⊙ Fast→Slow→Impulse
- Press  button to select frequency weighting.
  - ⊙ A weighting→C weighting→Z weighting
- Press  button start test, press  button again pause test
- Press  button stop test

Turn on the meter deform test mode is Lxyp mode; A weighting; Fast weighting

## CAUTION



Wind blowing across the microphone would bring additional extraneous noise. Once using the instrument in the presence of wind with speed higher than 10m/s, it must mount the windscreen to prevent the undesirable signals. Keep the microphone dry and avoid severe vibration.



Fig. 1

### 3.3. Data Hold

- Press  button to lock display data, press this button again to unlock



### 3.4. Maximum/Minimum

- Press  button to action MAX/MIN record mode, store maximum/minimum data, store time 99hours 59 minutes 59seconds, can press  button end measure action in advance

### 3.5. Single Data Record

- Press  button each time to store the display reading and memory location in memory.

### 3.6. Viewing Logged Reading

- Press  button more than 1 sec into the viewing logged reading mode
- Press  or  button to scroll through the readings
- Press  or  button to change time data (hh:mm:sec → YY-MM-DD)

- Press  button again to exit viewing logged reading mode

### 3.7. Set Mode

- Press  button into set mode , can set 7 functions in set mode

#### 3.7.1. Clock set



- Press  or  button to select option to adjust
- Press  or  button to change digit
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode

#### 3.7.2. Auto Record Time Set



- Press  or  button to select option to adjust
- Press  or  button to change digit
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode
- Minimum auto record time: 1 second; Maximum auto record time: 23 hours 59 minutes 59 seconds
- Set auto record time equal 0 second0 disable auto record function

#### 3.7.3. Auto Power Off Time Set



- Press  or  button to change digit
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode
- If you want to not auto power off, you can set auto power off time to 0
- Maximum auto power off time: 99 minutes

### 3.7.4. Clear Data Logger Memory



- Press  button to clear data logger memory for last record
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode

### 3.7.5. Clear All Data Logger Memory



- Press  button LCD will flash "ALL"
- Press  button again clear all data logger
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode

### 3.7.6. Copy All Data Logger To micro SD Card



- Before carrying on data to copy please insert micro SD card first

- Copy to micro SD card file to be named this machine ID; The max support capacity of micro SD card is 4GB
- This machine ID can be gone to by the user to define by oneself in the PC program, file format is ○○○○○○○○.IAR; Can define word dollar as 0~9;A~F
- Press  button Starts copying data logger data to micro SD Card
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode
- micro SD CARD suggests use Transcend
- When usage copy function, please use transformer the power (DC 6~9V/500mA)
- Please change into the format of the micro SD card FAT or FAT32 formats

### 3.7.7. Auto Backup



- The auto backup function is automatically copy memory data into miniSD card, and automatically delete record data
- Be in use auto backup function, please use transformer power supply
- Press  button LCD will flash "On", be in use automatic backup function
- Press  button to store set and exit set mode
- Press  button no store set data, into next set mode

### 3.7.8. 94dB Calibration



- Please first semaphore of inputing the 94 dBA@s 1 KHZ to the meter.
- Right bottom LCD to display for test a value at present, Calibration range 91.0~97.0dB.
- Left bottom LCD displays for the correction data that estimates to write a memory.
- Press  button store correction to be worth and escape from to set mode.
- Press  button don't store correction to be worth and escape from to set mode.

## 4. SPL (LXYP) TEST MODE

- SPL (Lxyp) test mode default frequency weighting is A weighting; time weighting is FAST.
- Press  button start a Lxyp Max/Min measurement.
- Press  to change frequency weighting before starting a measurement .
- Press  button to change time weighting .
- Press  button pause measurement after starting a measurement
- Press  button can end a measurement in advance.
- LCD show on the period of the measurement is for experience time, the longest record 99hours 59 minutes 59sec.



Have not started measurement



Start measurement



Pause measurement

## 5. LEQ TEST MODE

- Leq test mode default frequency weighting is A weighting; time weighting is FAST; Time of the integral 30 secs.
- Press  to change frequency weighting before starting a measurement.
- Press  button pause measurement after starting a measurement.
- Press  button can end a measurement in advance.
- LCD show on the period of the measurement is an integral time, adopt countdown system .



Have not started measurement



Start measurement








End measurement

- ※ LEQ Auto Record Setting: in LEQ measurement time setting toggle by 'RECORD/MEMORY' key

## 5.1. INTEGRAL TIME SET

Leq test mode press  button into integral to set for time, can select that 9 kinds of integral time or hand operation establish definite integral for time .

-  SET 0 prepare to establish integral time 10 sec
-  SET 1 prepare to establish integral time 1 minutes
-  SET 2 prepare to establish integral time 5 minutes
-  SET 3 prepare to establish integral time 10 minutes
-  SET 4 prepare to establish integral time 30 minutes
-  SET 5 prepare to establish integral time 1 hour
-  SET 6 prepare to establish integral time 8 hour
-  SET 7 prepare to establish integral time 16 hour
-  SET 8 prepare to establish integral time 24 hour
-  SET 9 moveses to establish definite integral for time, the shortest integral calculus time 1 sec, the longest integral calculus time 30 days 23 hours 59 minutes 59 sec
- Press  button choose integral calculus enactment.
-  ;  button to select option to adjust.
-  ;  button to change digit.
- Press  button to store set and exit set mode.

## 6. SEL (LAE) TEST MODE

- SEL (LAE) test mode deform frequency weighting is A weighting;time weighting is FAST.
- Press  to change frequency weighting before starting a measurement
- Press  button pause measurement after starting a measurement.
- Press  button can end a measurement in advance.
- LCD to show on the period of the measurement is for experience time,the longest record 99hours 59 minutes 59sec



Have not started measurement



Start measurement



End measurement

## 7. PEAK MAXIMUM TEST MODE

- Peak test mode default frequency weighting is C weighting; time weighting is Peak.
- Press  button pause measurement after starting a measurement.
- Press  button can end a measurement in advance.
- LCD show on the period of the measurement is for experience time, the longest record 99hours 59 minutes 59sec.



Have not started measurement



Start measurement



End measurement

## 8. RT60( REVERBERATION TIME) TEST MODE

- RT60 test mode default frequency weighting is A weighting; time weighting is Fast.
- Press  to change frequency weighting before starting a measurement.
- Press  button pause measurement after starting a measurement.
- Press  button can end a measurement in advance.
- MAX value is the 1st getting value equal / or more than 90dB.
- MIN value is MAX value minus 60 dB, the 60dB is a fixed/standard value after calculation.
- The reverberation time is for calculating the require time from MAX. value (i.e. 91dB) reduce to MIN (i.e.31dB) .



Have not started measurement



Start measurement



End measurement



## 9. EXPLANATION

### 9.1. 1. MEASUREMENT PARAMETERS:

| Test Function | Screen parameter | Explanation   |
|---------------|------------------|---|
| SPL           | LAFp             | Sound pressure level (SPL)  |
| SPL           | LASp             | Sound pressure level (SPL)  |
| SPL           | LCFp             | Sound pressure level (SPL)  |
| SPL           | LCSp             | Sound pressure level (SPL)  |
| SPL           | LZFp             | Sound pressure level (SPL)  |
| SPL           | LZSp             | Sound pressure level (SPL)  |
| Leq           | LAFq             | Equivalent continuous level for the duration of the measurement for A weighting             |
| Leq           | LCFq             | Equivalent continuous level for the duration of the measurement for C weighting             |
| Leq           | LZFq             | Equivalent continuous level for the duration of the measurement for Z weighting             |
| SEL           | LAE              | Frequency weighted sound exposure level for the duration of the measurement for A weighting |
| SEL           | LCE              | Frequency weighted sound exposure level for the duration of the measurement for C weighting |
| SEL           | LZE              | Frequency weighted sound exposure level for the duration of the measurement for A weighting |
| Peak          | Lcpeak           | Instantaneous C peak level  |

## **9.2. A, C, Z WEIGHTING INSTRUCTION:**

A: The A weighting curve is based on 40 Phon Fletcher-Munson Equal Loudness Contour, Noise assessment in human, suggest to use the A weighting.

C: The C weighting in essentially is approximate smooth. With labor safety concern, suggest using the C weighting.

Z: The Z weighting for the electric instrument interior not the linear signal which processes after the filter, suits in wants to output AC or the DC signal does other research to use.

The Z weighting is a linear signal which is not processed through the filter.

It's suitable to output AC or DC signal for research.

## **3. Sound Level Meter Class Description:**

- Class 0: use in the laboratory reference standard.
- Class 1: laboratory or field use.
- Class 2: laboratory or field use.
- Class 3: general field use.

### 9.2.1. Input interface

The front is PLT 4, the signal input receptacle. The pin definition and function are shown in Fig 2 :

#### ST-107

- Pin 1 Power
- Pin 2 GND
- Pin 3 NC
- Pin 4 NC

#### ST-109/ST-107S

- Pin 1 Power(+)
- Pin 2 GND
- Pin 3 Power(-)
- Pin 4 GND

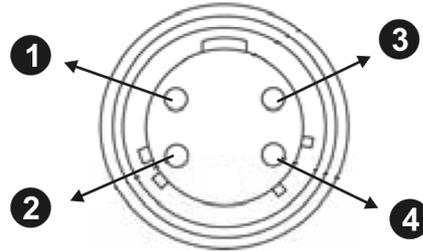


Fig 2

### 9.2.2. ANALOG AC/DC OUTPUT

AC output: 2 Vrms/130dB

DC output: 2Vdc/130dB



Fig 3

output receptacle

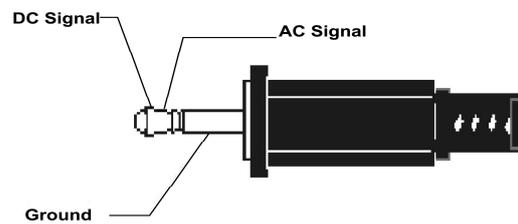


Fig 4

3.5mm output plug

### The Microphone Lengthens The Test

In order to avoid the measurement deviation caused by the reflection effect and operation problem, use the cable to extend the microphone for measuring. (Refer to chapter 11.3.2).

1. Press  button to turn the power off.
2. Turn the preamplifier and microphone counterclockwise to be separated from the main body. (Refer to Fig 5).
3. Connect the extension cable to the microphone and main body. (Refer to Fig 6).



Fig 5

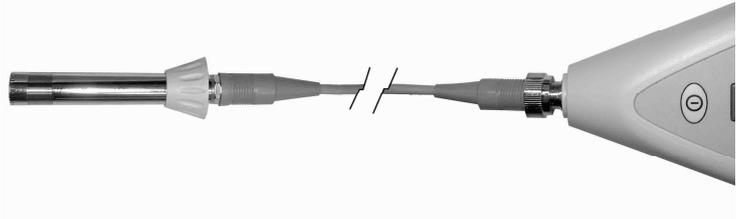


Fig 6

## 10. MAINTENANCE

### 10.1. GENERAL INFORMATION

This is a precision instrument. To guarantee its performances be sure to use it or keep it stored on suitable environmental conditions. Do not expose it to high temperatures or humidity or direct sunlight. Be sure to turn it off after use. If you expect not to use the instrument for a long period remove batteries to avoid leakages of battery liquid which could damage the its inner components.

### 10.2. BATTERY REPLACEMENT

The low battery “” indication (refer to chapter 11.1.2) is displayed, the batteries are to be replaced.

Turn off the instrument.

Remove the battery cover.

Remove all the batteries from the battery holder.

Insert four new batteries of the same type (refer to chapter 11.1.2) respecting the polarity signs.

Install the battery cover.

Please depend on the local laws and regulations to process the waste battery.

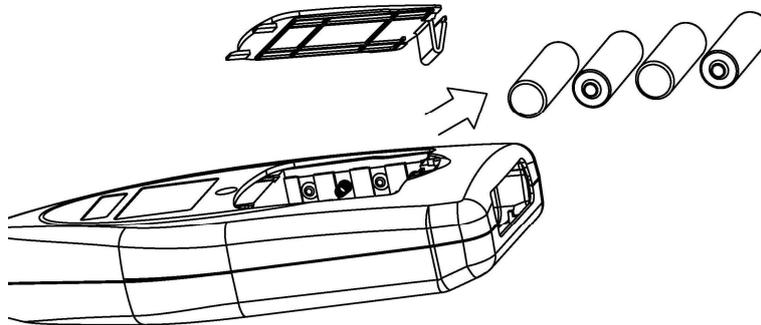


Fig 1: Opening and closing of battery cover

### 10.3. CLEANING

To clean the instruments use a soft dry cloth. Never use a wet cloth, solvents or wate.

### 10.4. END OF LIFE



**Caution:** this symbol indicates that equipment and its accessories shall be subject to a separate collection and correct disposal.

# 11. TECHNICAL SPECIFICATIONS

## 11.1. FEATURE

Environmental conditions: temperature  $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ , relative humidity < 80%.

|  |   |
|--|---|
| Display  | Double rows LCD MAX reading 1999  |
| Display Refresh Rate                             | 1 Time/sec  |
| Major Standards                                  | Applicable<br>IEC 61672-1 : 2002 Class1(ST-109)<br>JJG-188-2002 Class 1(ST-109)   |
|  | IEC 61672-1 : 2002 Class2(ST-107/ST-107S)<br>JJG-188-2002 Class 2(ST-107S)  |
| Other Standards                                  | IEC60651:1979 TYPE 1(ST-109)<br>IEC60804:2000 TYPE 1(ST-109)<br>ANSI S1.4:1983 Type1 (ST-109)   |
|  | IEC60651:1979 TYPE 2(ST-107/ST-107S)<br>IEC60804:2000 TYPE 2(ST-107/ST-107S)<br>ANSI S1.4:1983 Type12(ST-107/ST-107S)                 |
| Microphone(ST-109)                               | 1/2" pre-polarized condenser microphone build in preamplifier: 50 mV/Pa, frequency range: 20 Hz~16 kHz, Thermal noise: <25 dB(A)      |
| Microphone(ST-107S)                              | 1/2" pre-polarized condenser microphone build in preamplifier: 1V/Pa@250HZ, frequency range: 20 Hz~12.5 kHz, Thermal noise: <25 dB(A) |
| Microphone(ST-107)                               | 1/2 inch Electret condenser microphone  |
| Measurement Items                                | Lxyp, Lxmax, Lxmin, Lxeq, LAE, Lcpeak,RT60  |
| Measurement Range                                | 30dB to 130dB (A)<br>35dB to 130dB (C)<br>40dB to 130dB (Z)   |
| Dynamic Range                                    | 100 dB  |
| Integrate Time Setup                             | Randomly, 10s, 1m, 5m, 10m , 30m, 1h, 8h, 16h, 24h  |
| Internal memory                                  | 24C512 x 4 ; MAX Datalogger data >37,000  |
| Micro SD Card                                    | The max support capacity of micro SD card is 4GB ;<br>37,000 data about story space 300KB   |
| Maximum Peak C Weighting Sound Level Measurement | 70~133 dB   |
| Time Weighting                                   | Fast, Slow, Impulse, Peak   |
| Frequency Weighting                              | A/C/Z   |
| Frequency Range                                  | 31.5Hz~8KHz(ST-107)   |
|  | 20Hz~8KHz(ST-107S)  |

|               |   |
|---------------|---|
|               | 10Hz~20KHz(ST-109)                      |
| DC Output     | 2Vdc/130dB                              |
| AC Output     | 2Vrms/130dB                             |
| Starting Time | < 10 Second                             |
| Battery Life  | 30 hours (LR6 : 4 Alkaline batteries)   |
| AC Adapter    | Input : 100V~240V ACV, Output:6V~9V DCV |
| Dimensions    | 285(L) x 90(W) x 39(H) mm               |
| Weight        | 500g ( including Batteries)             |

### 11.1.1. Standard:

The instrument complies with IEC 61672-1:2002 class 1; JJG-188-2002 Class 1; IEC60651:1979 TYPE 1, IEC60804:1985 TYPE 1, ANSI S1.4:1983 Type1.(ST-109)

The instrument complies with IEC 61672-1:2002 class 2; JJG-188-2002 Class 2; IEC60651:1979 TYPE 2, IEC60804:1985 TYPE 2, ANSI S1.4:1983 Type2.(ST-107)

The instrument complies with IEC 61672-1:2002 class 2; IEC60651:1979 TYPE 2, IEC60804:1985 TYPE 2, ANSI S1.4:1983 Type2.(ST-107)

### 11.1.2. General Data

Mechanical characteristics

**Size :** 285(L) x 90(W) x 39(H) mm

Weights (including batteries) : approximate 500g

#### Power supply

Battery type 4 batteries 1.5 V – LR6 – AA – AM3 – MN 1500  
AC to DC Adapter. (6V~9V/500mA).

Low Battery : Replace battery as LCD display “”

Battery life: About 30 hrs (alkaline Battery).

## 11.2. ENVIRONMENT

### 11.2.1. Environmental Conditions

- For inside use, max height: 2000m
- Reference temperature:  $23^{\circ} \pm 5^{\circ}\text{C}$
- Operation temperature:  $5 \sim 40^{\circ}\text{C}$
- Operation humidity: <80% RH
- Storage temperature  $-10 \sim 60^{\circ}\text{C}$
- Storage humidity <70%

### **11.2.2. EMC**

This instrument was designed in accordance with EMC Standards in force and its compatibility has been tested in accordance with EN61326-2 (2006).

## **11.3. ACCESSORIES**

### **11.3.1. Standard Accessories**

- Meter: Instrument body x 1 .
- User's manual.
- Switching power supply: 100V ~ 240V AC to DC 6V~9V/500mA.
- Carrying case.
- 4 batteries 1.5 V – LR6 – AA – AM3 – MN 1500.
- 60mm diameter windscreen.
- Setup CD-Disk.
- MINI USB Cable (Mini B type).

## **12. SERVICE**

### **12.1. WARRANTY CONDITIONS**

This instrument is guaranteed for one year against material or production defects, in accordance with our general sales conditions. During the warranty period the manufacturer reserves the right to decide either to repair or replace the product. Should you need for any reason to return back the instrument for repair or replacement take prior agreements with the local distributor from whom you bought it. Do not forget to enclose a report describing the reasons for returning (detected fault). Use only original packaging. Any damage occurred in transit due to non-original packaging will be charged anyhow to the customer.

The warranty doesn't apply to:

Accessories and batteries (not covered by warranty)

Repairs made necessary by improper use (including adaptation to particular applications not foreseen in the instructions manual) or improper combination with incompatible accessories or equipment.

Repairs made necessary by improper shipping material causing damages in transit.

Repairs made necessary by previous attempts for repair carried out by non-skilled or unauthorized personnel.

Instruments for whatever reason modified by the customer himself without explicit authorization of our Technical Dept.

The contents of this manual may not be reproduced in any form whatsoever without the manufacturer's authorization.

Our products are patented. The logotypes are registered. We reserve the right to modify characteristics and prices as part of technological developments which might require them.

### **12.2. SERVICE**

Shouldn't the instrument work properly, before contacting your distributor make sure that batteries are correctly installed and working, check the test leads and replace them if necessary.

**TENMARS ELECTRONICS CO., LTD**

6F, 586, RUI GUANG ROAD, NEIHU,  
TAIPEI 114, TAIWAN.

E-mail: [service@tenmars.com](mailto:service@tenmars.com)

<http://www.tenmars.com>